



- RESISTORS
 IN OHM, 1/4W, ±5% TOLERANCE UNLESS
 OTHERWISE NOTED K: k.Ω M: M.Ω
- CAPACITORS
 IN μF UNLESS OTHERWISE NOTED P: pF
- SWITCHES
 S1 : POWER SWITCH (OFF POSITION)
 S2-1-18 : REC-PLAY SWITCH (PLAY POSITION)
 S3-1-2 : EQ. SWITCH (CHROME POSITION)
 S4-1-2 : BIAS SWITCH (CHROME POSITION)
 S5-1-2 : LIMITER SWITCH (OFF POSITION)
 S6-1-2 : DOLBY SWITCH (OFF POSITION)
 S7 : CHROME TAPE DETECTOR (NO HOLE POSITION)
 S8-1-2 : MPX FILTER SWITCH (OFF POSITION)
 S9-1-4 : MEMORY SWITCH (OFF POSITION)
 S10-1-4 : PLAY SWITCH (OFF POSITION)
 S11-1-4 : REW SWITCH (OFF POSITION)
 S12-1-4 : FAST FORWARD SWITCH (OFF POSITION)
 S13-1-4 : REC SWITCH (OFF POSITION)
 S14-1-2 : CASSETTE DETECTOR SWITCH (NO HOLE POSITION)
 S15 : SENSING SWITCH
 S16 : COUNTER SWITCH
 S17-1-2 : PAUSE SWITCH (OFF POSITION)
 S18 : ERASE PREVENT DETECTOR SWITCH
 (NOT RECORDING POSITION)