

CONTENTS

§ 1 MONOPHONIC RECEIVERS

FM - P300	1
FM - R301	1
FM - B302	2
FM - B100	2
FM - B101	3

§ 2 STEREO RECEIVERS

SM - Q140	3
SM - Q141	4
SM - B160	6
SM - B161	7
SM - B180	8
SM - B200	9
SM - B200A	10
SM - B201	11
SM - W203	12
SM - G204, SM - G204B	13
SM - G204E	14
SM - Q300, SM - Q300A, SM - Q300B	16
SM - Q300E	17

§ 3 AM/FM MPX STEREO RECEIVERS

SM - G205	15
SM - Q305	18
SM - 600	19
SX - 34	29
LX - 34	30
SX - 40	31
SX - 82	32
SX - 82E	33
SX - 110	34
ER - 420	35
SX - 800	36
SX - 1000T	38

§ 4 AMPLIFIERS, AUDIO ADAPTORS & TUNERS

SM - R150	4
SM - R151	5
SM - C800	20
SM - 801	20
SM - 83, SM - 500	21
SMT - 84	22
HF - 90M (<i>Monophonic Power Amplifier</i>)	23
HF - 90MH (<i>Monophonic Power Amplifier</i>)	23
SR - 101 (<i>Reverberation Amplifier</i>)	24
CSR - 1 (<i>Reverberation Amplifier</i>)	24
STP - 1 (<i>Head Amplifier</i>)	25
STP - 1S (<i>Head Amplifier</i>)	25
STP - 2 (<i>Head Amplifier</i>)	25
MXA - 1A (<i>FM MPX Adaptor</i>)	26
MXA - 3 (<i>FM MPX Adaptor</i>)	26
AFT - 11	27
AFT - 12	27
AFT - 14	27
TX - 5	28