 
 



SX-9000/FW

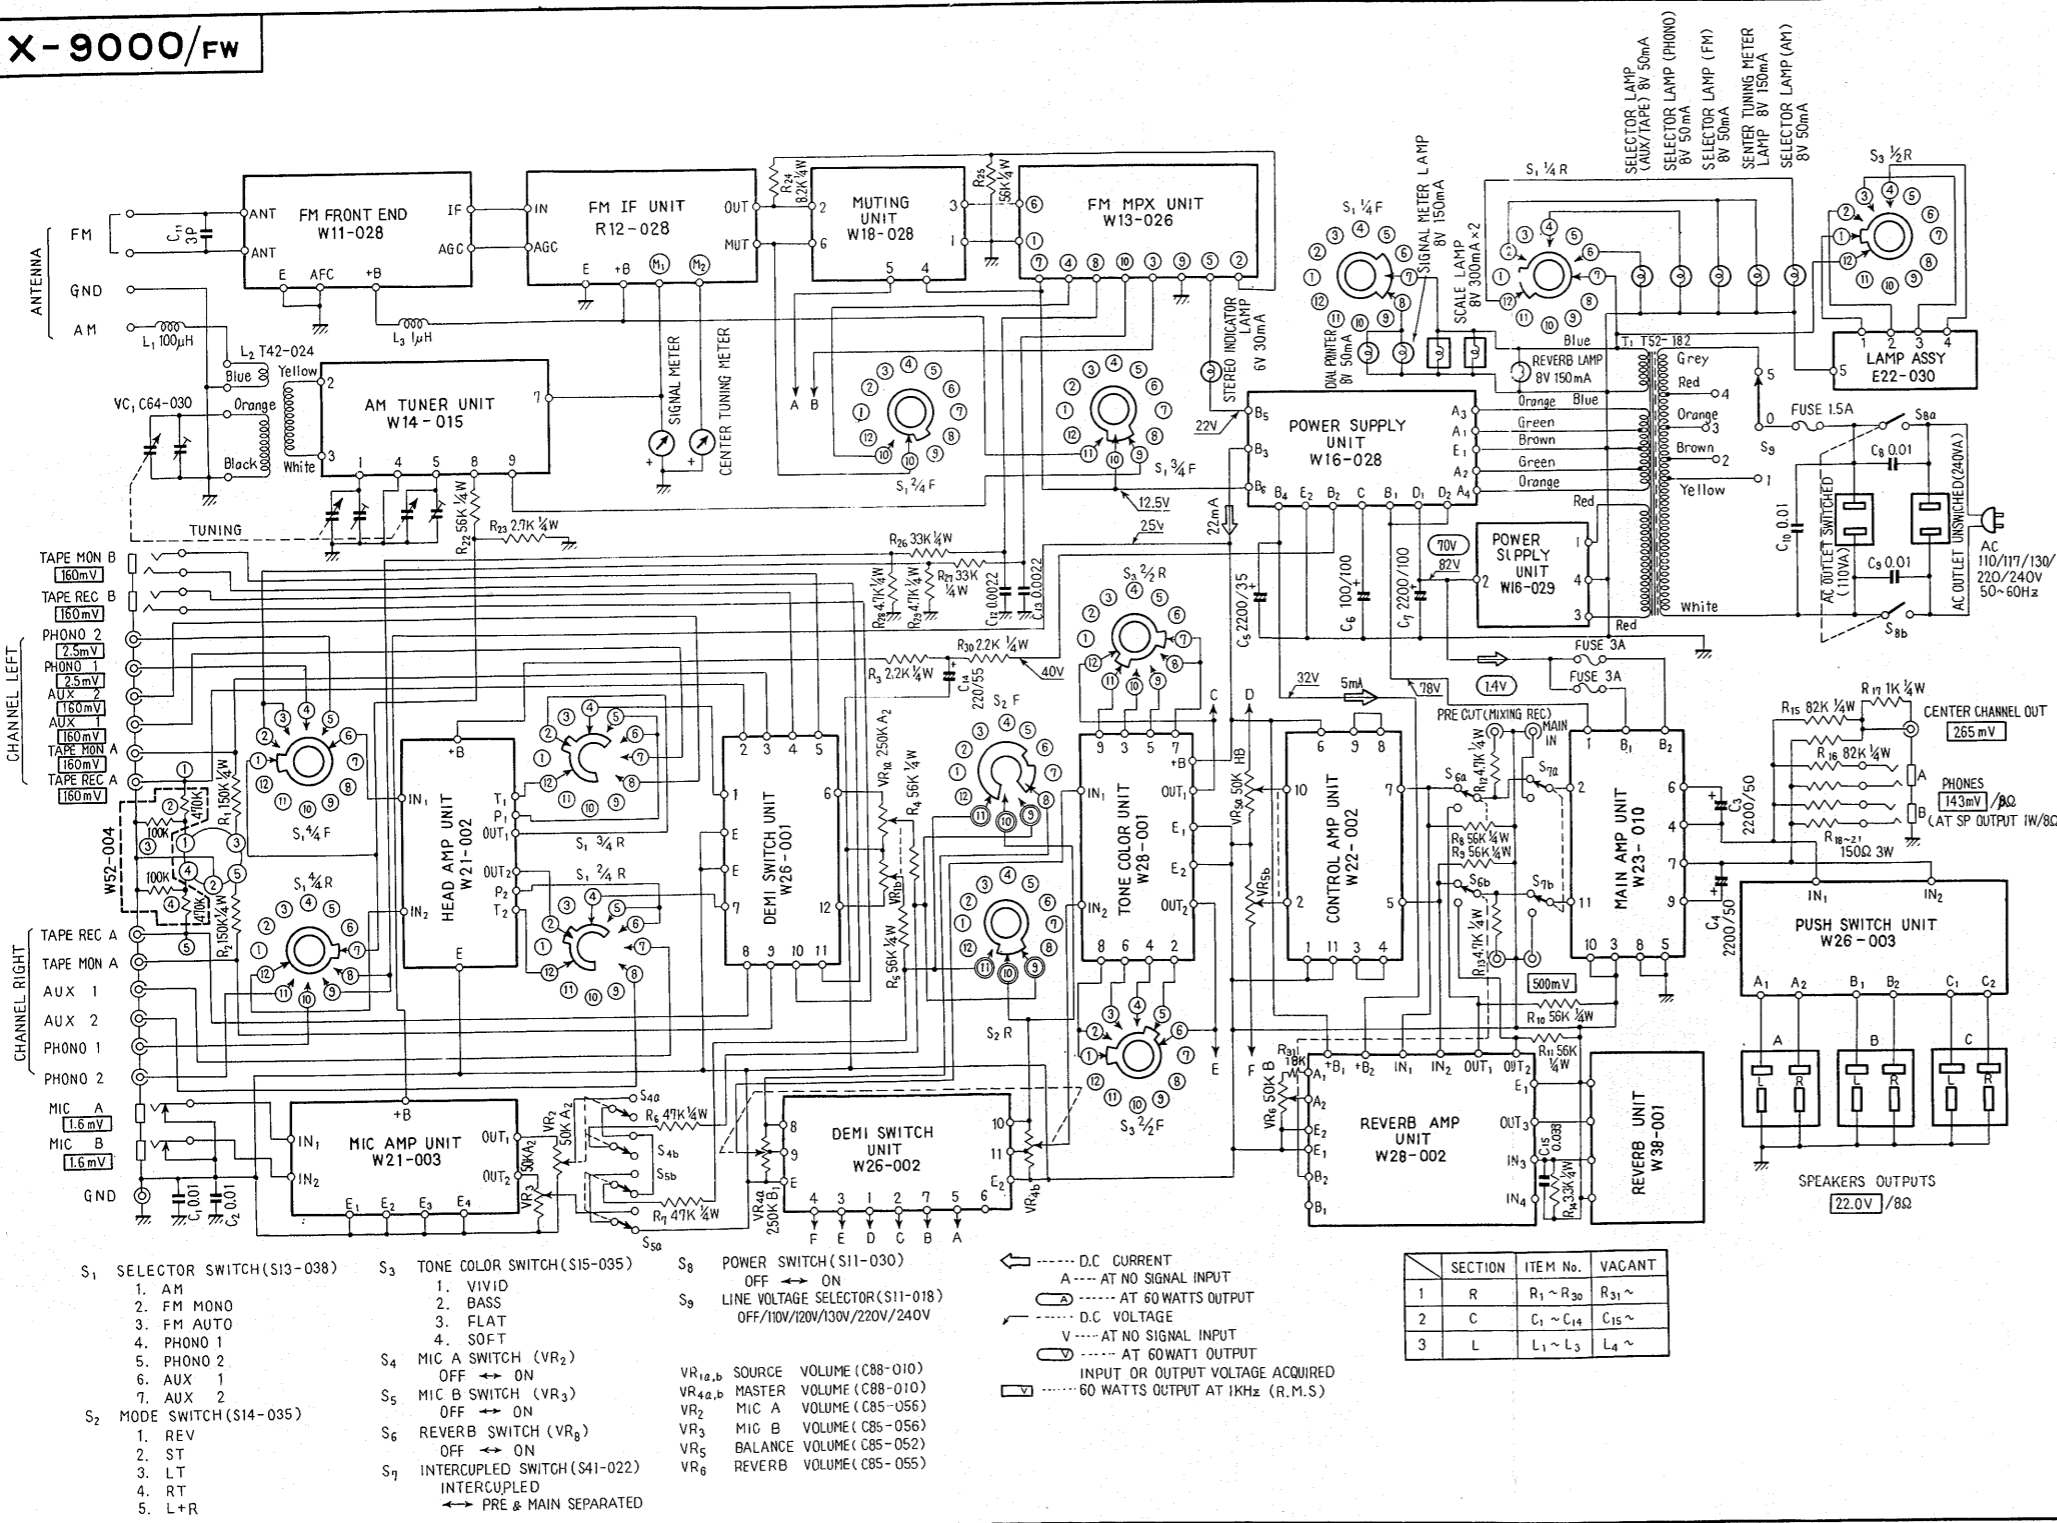


POWER SUPPLY UNIT
W16-028

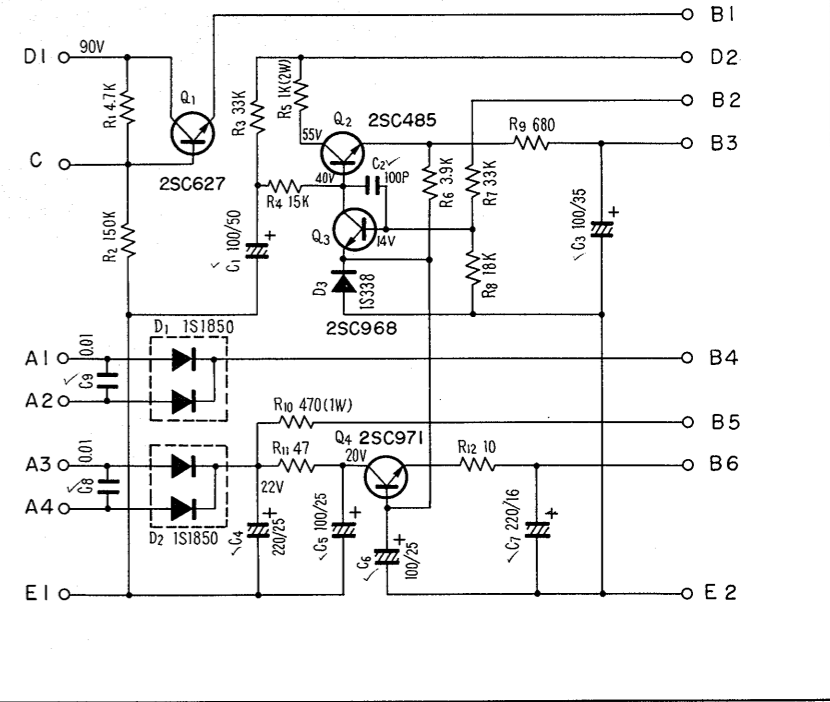

 
MUTING UNIT
W18-028

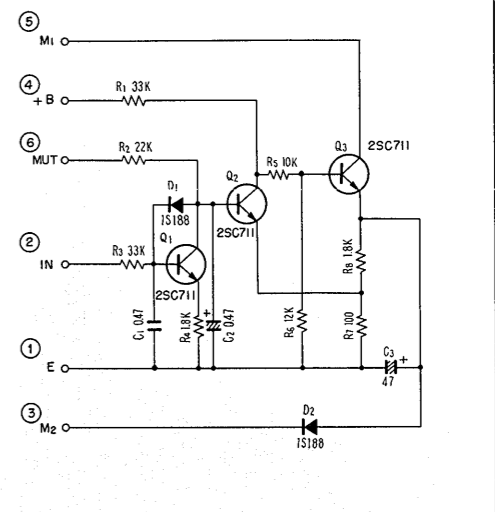


FM FRONT-END
W11-028

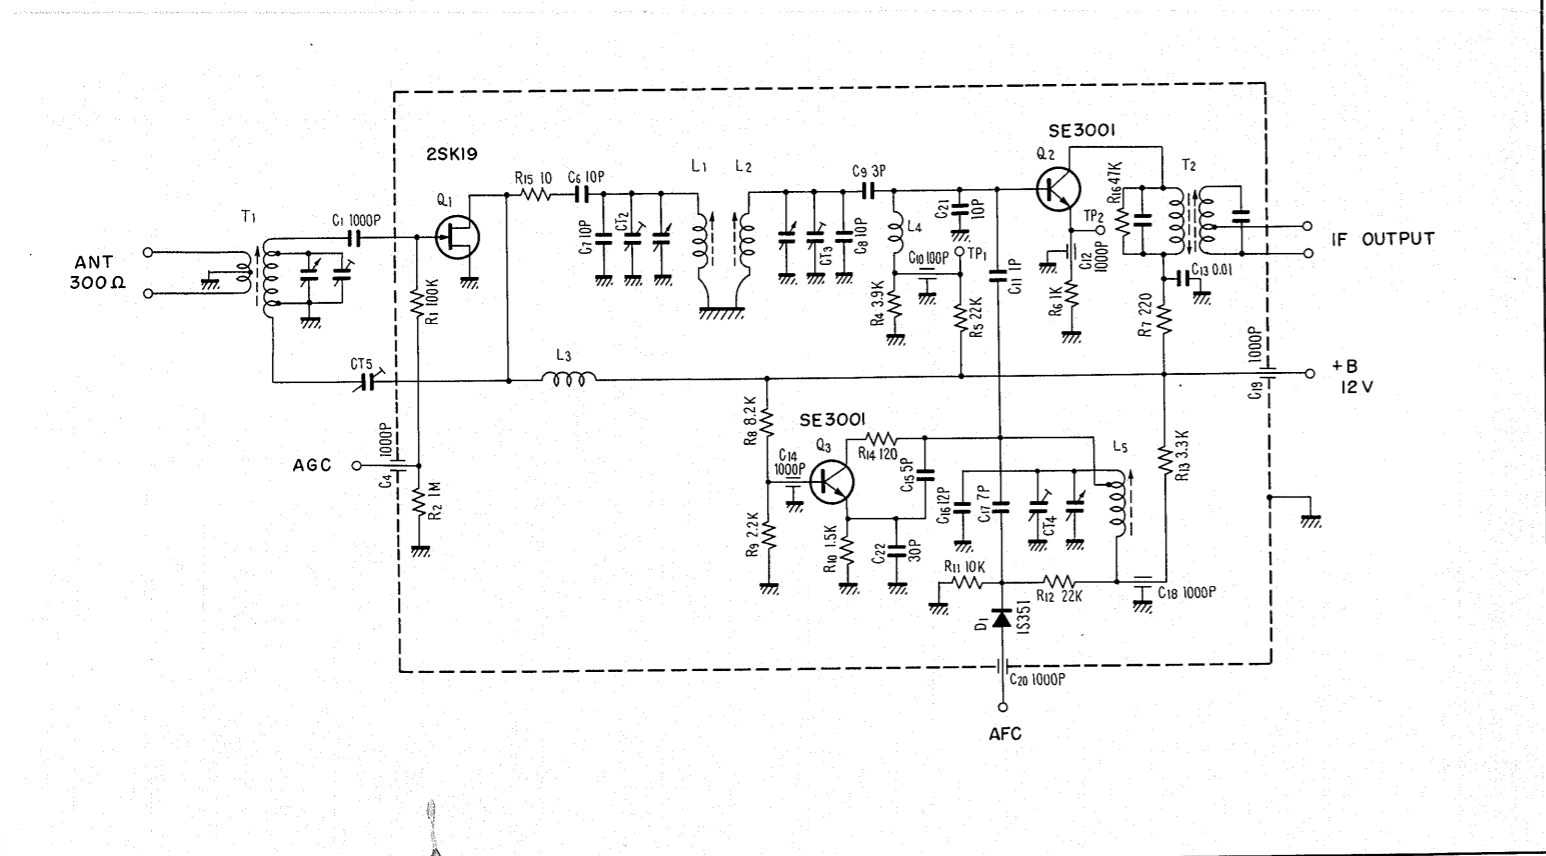 


MPX UNIT
W13-026

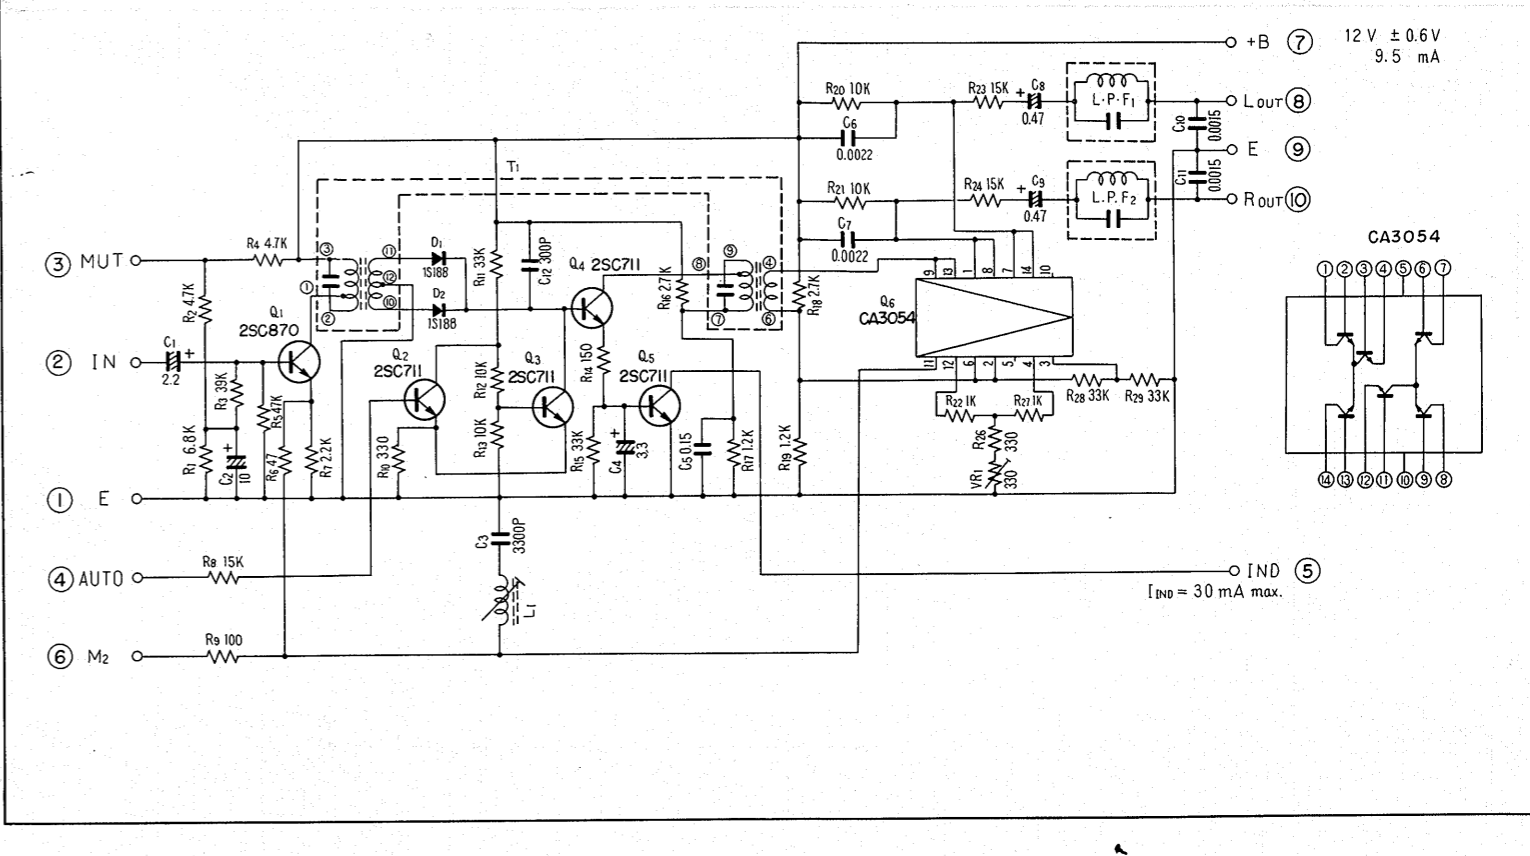 


FM IF UNIT
W12-028

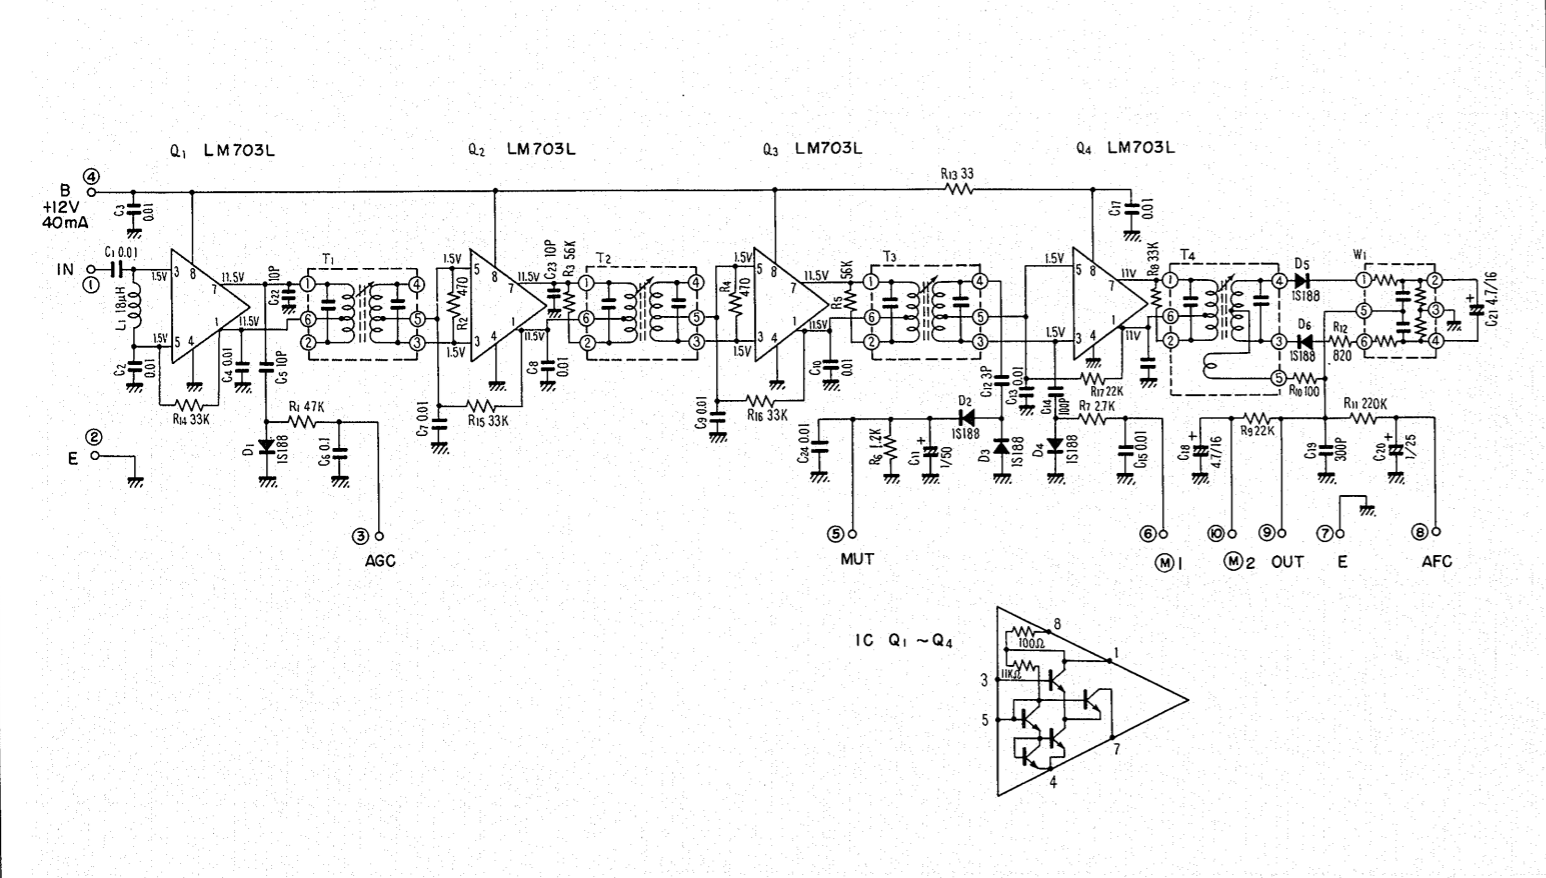 


AM TUNER UNIT
W14-015

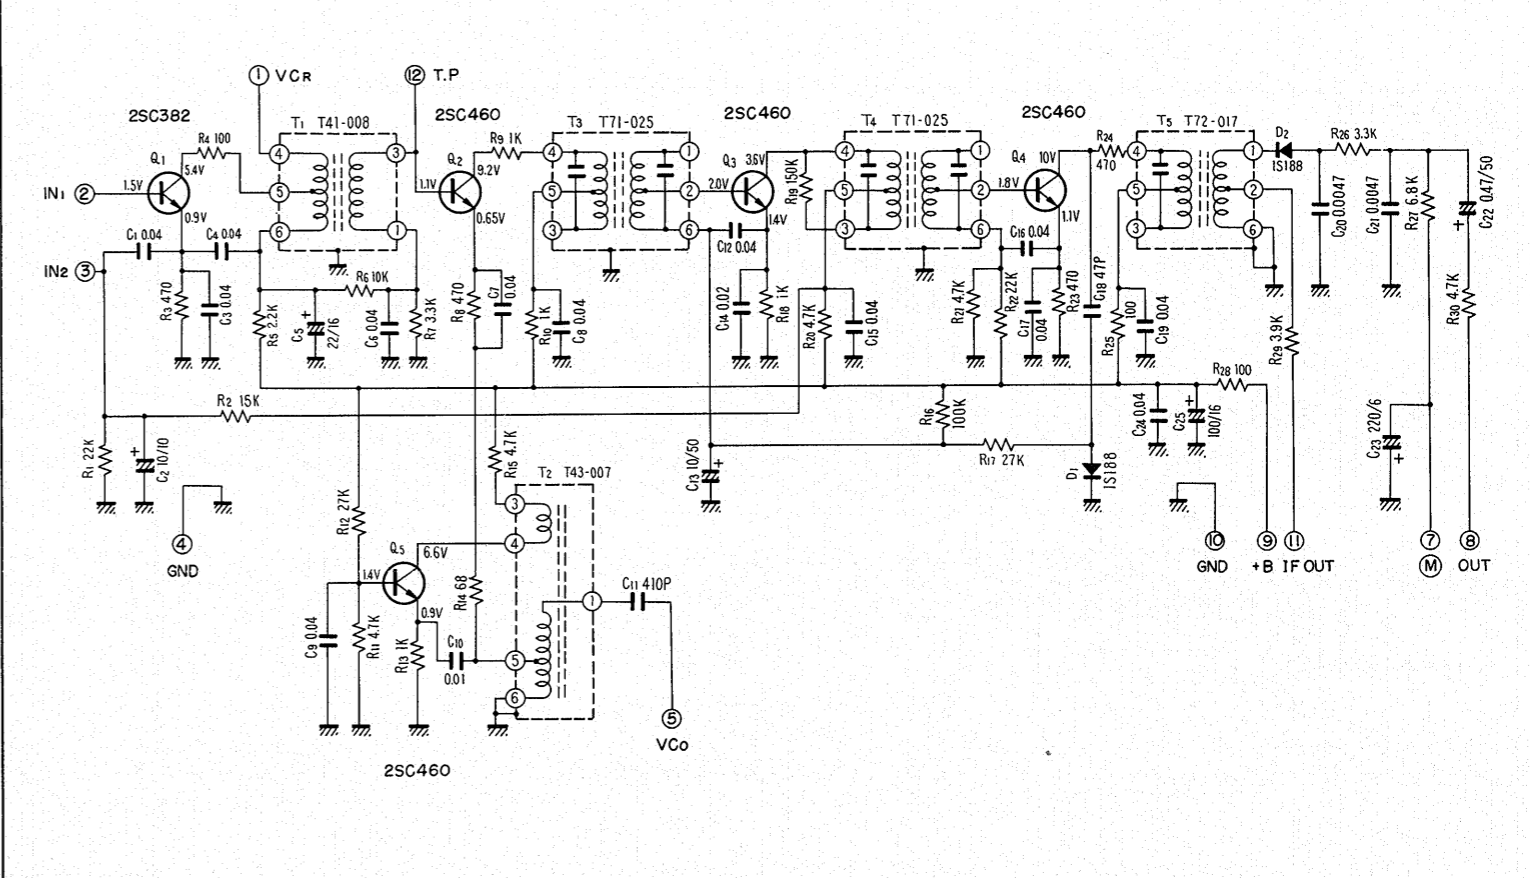 

SX-9000/FW

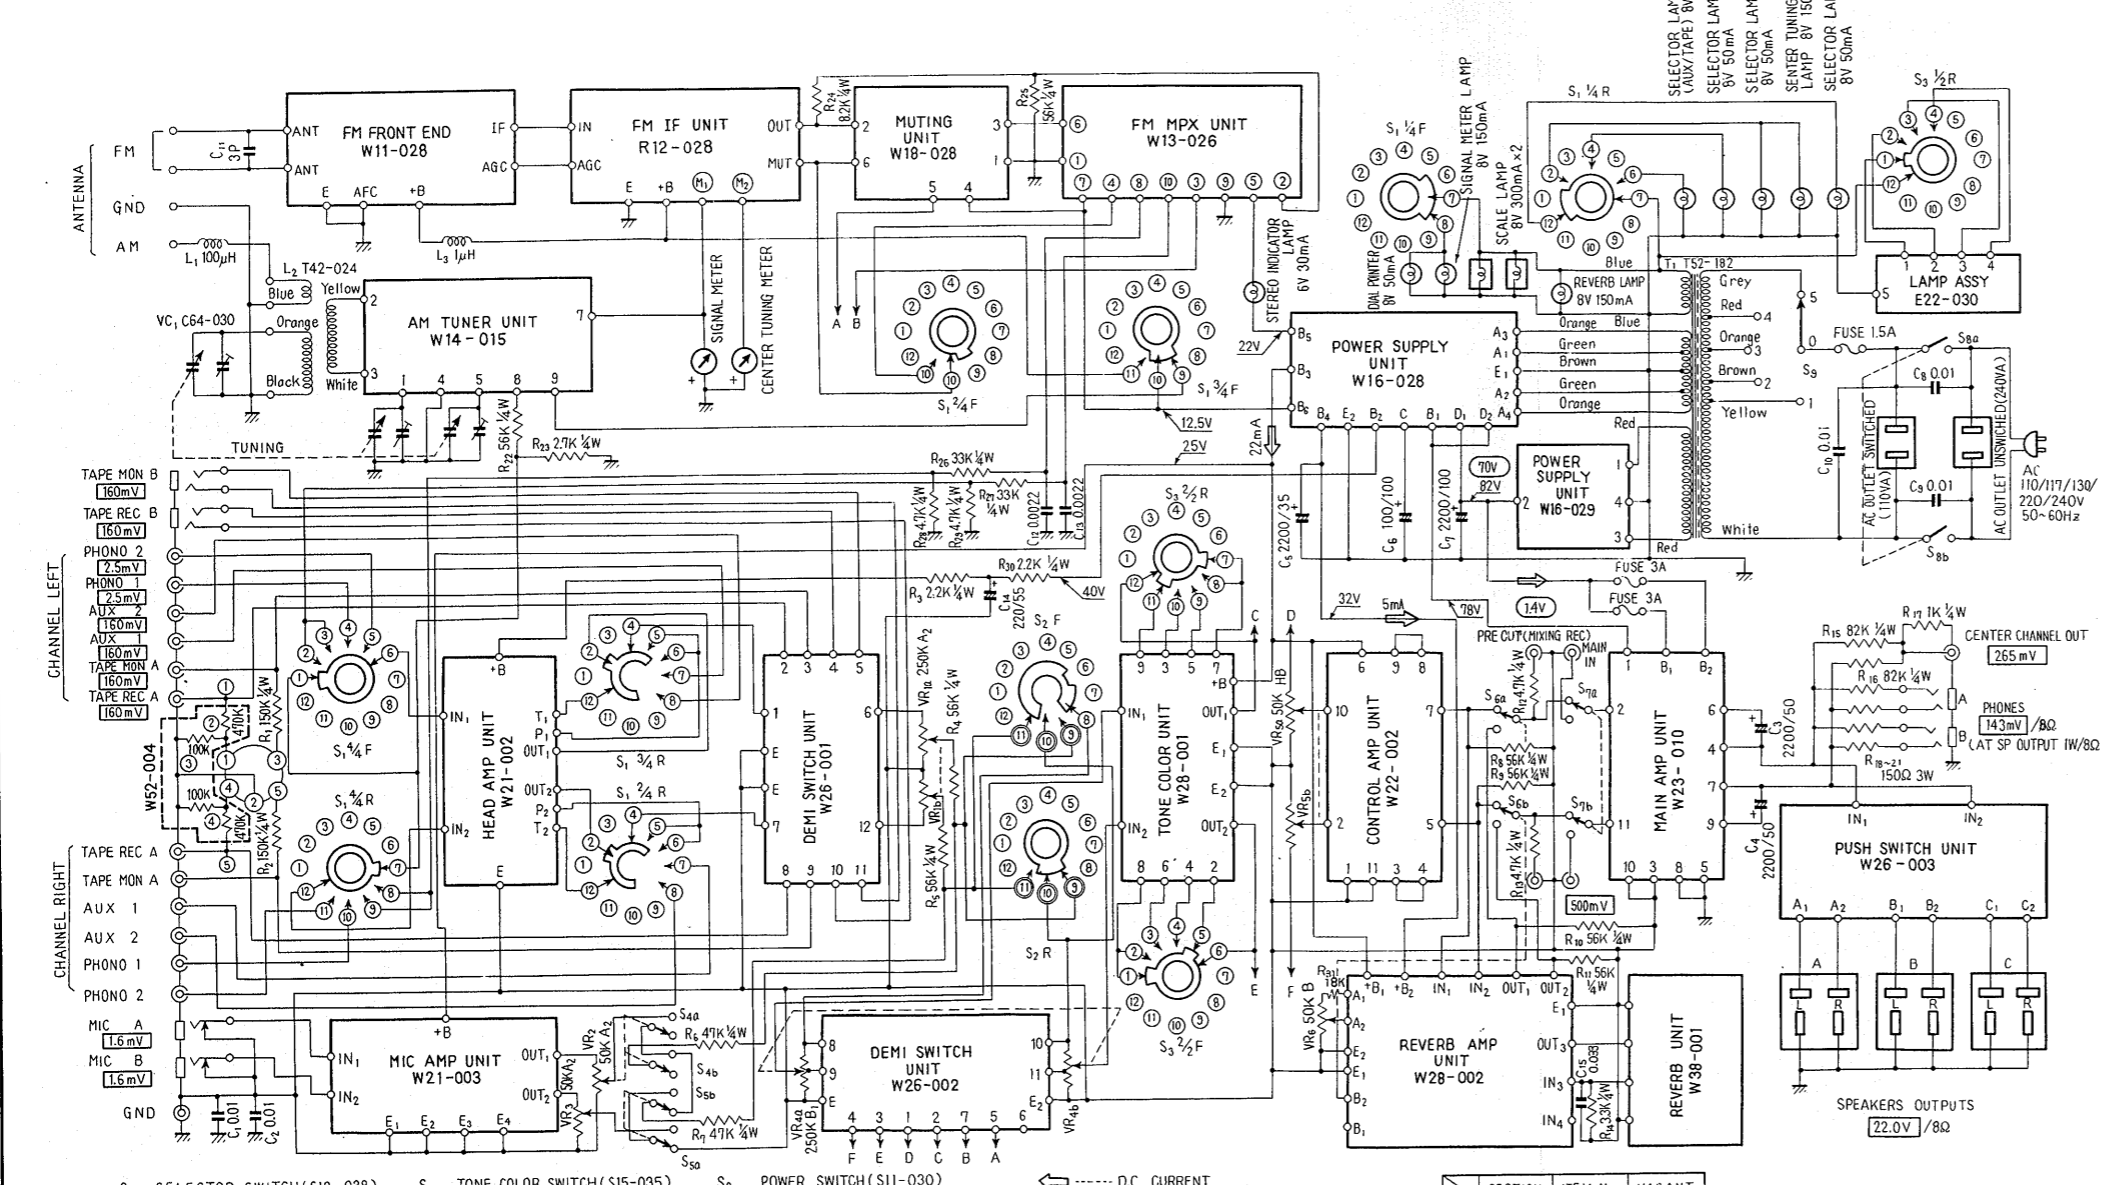 


- S₁ SELECTOR SWITCH (S10-038)
 1. AM
 2. FM MONO
 3. FM AUTO
 4. PHONO 1
 5. PHONO 2
 6. AUX 1
 7. AUX 2
- S₂ MODE SWITCH (S14-035)
 1. REV
 2. ST
 3. LT
 4. RT
 5. L+R
- S₃ TONE COLOR SWITCH (S15-035)
 1. VIVID
 2. BASS
 3. FLAT
 4. SOFT
- S₄ MIC A SWITCH (VR₂)
 - OFF → ON
- S₅ MIC B SWITCH (VR₃)
 - OFF → ON
- S₆ REVERB SWITCH (VR₆)
 - OFF → ON
- S₇ INTERCUPLED SWITCH (S41-022)
 - INTERCUPLED
 - PRE MAIN SEPARATED
- S₈ POWER SWITCH (S11-030)
 - OFF → ON
- S₉ LINE VOLTAGE SELECTOR (S11-018)
 - OFF/110V/120V/130V/220V/240V




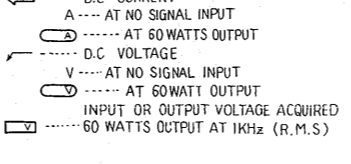 


| SECTION | ITEM No. | VAGANT |
|---------|----------------------------------|-------------------|
| 1 | R ₁ ~ R ₃₀ | R ₃₁ ~ |
| 2 | C ₁ ~ C ₁₄ | C ₁₅ ~ |
| 3 | L ₁ ~ L ₃ | L ₄ ~ |

 
HEAD AMP UNIT W21-002

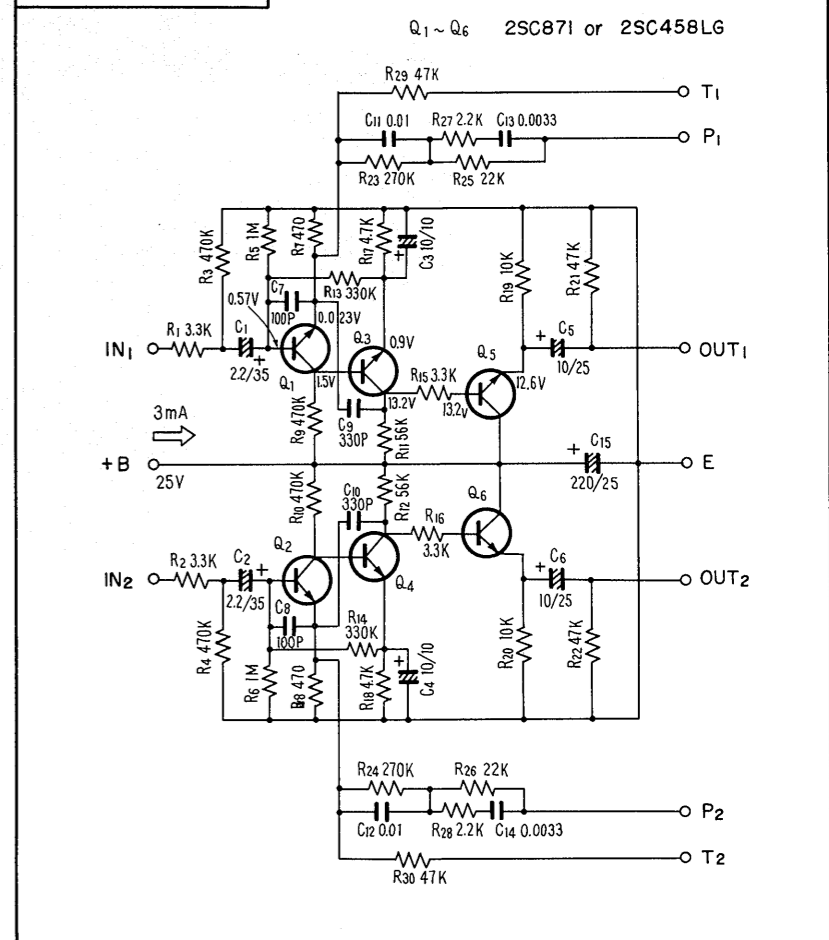


MIC AMP UNIT W21-003

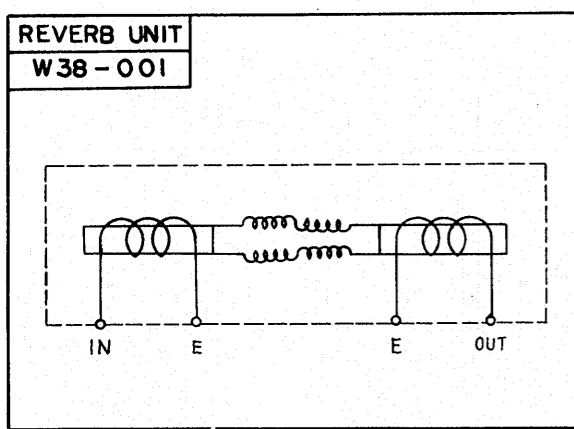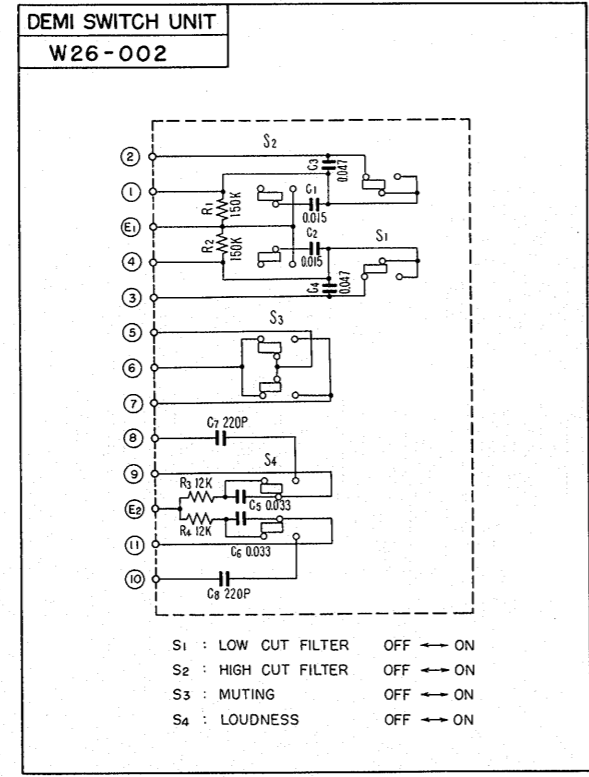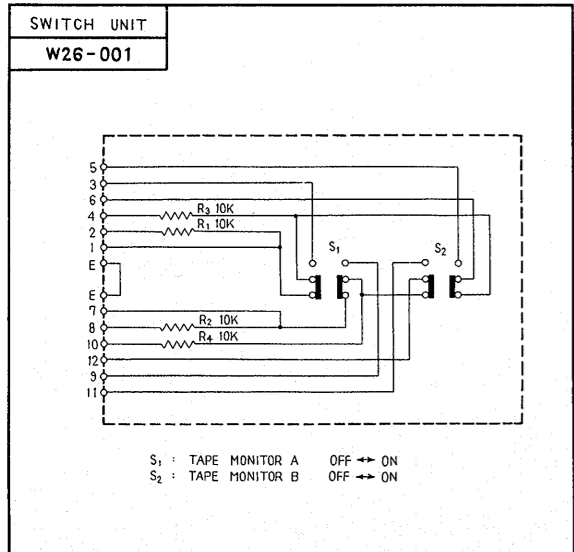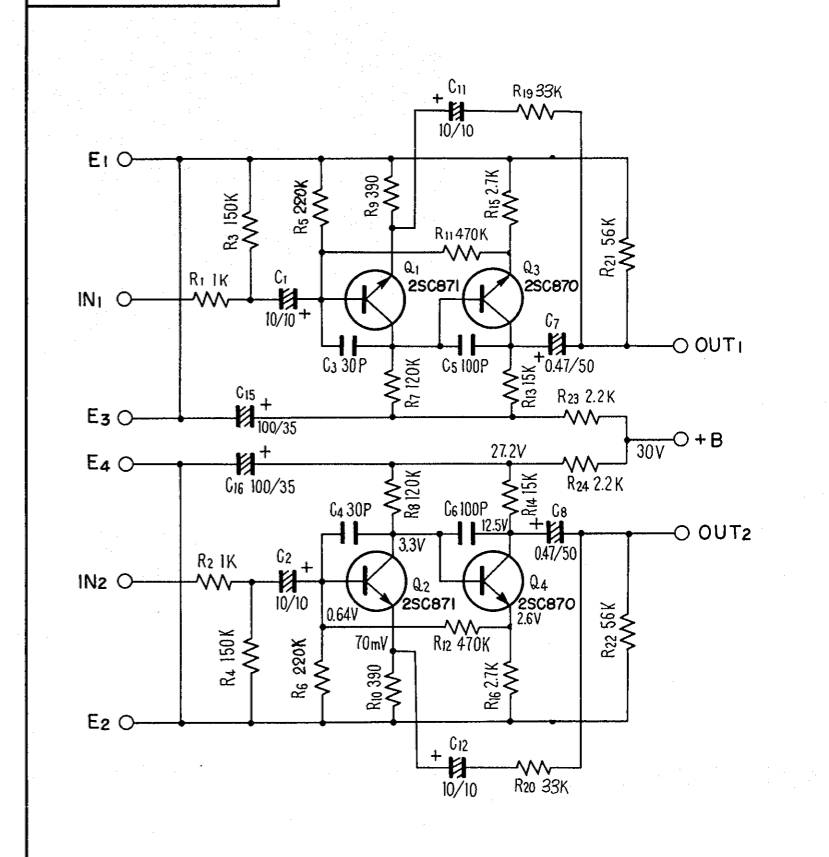    


TONE COLOR UNIT W28-001

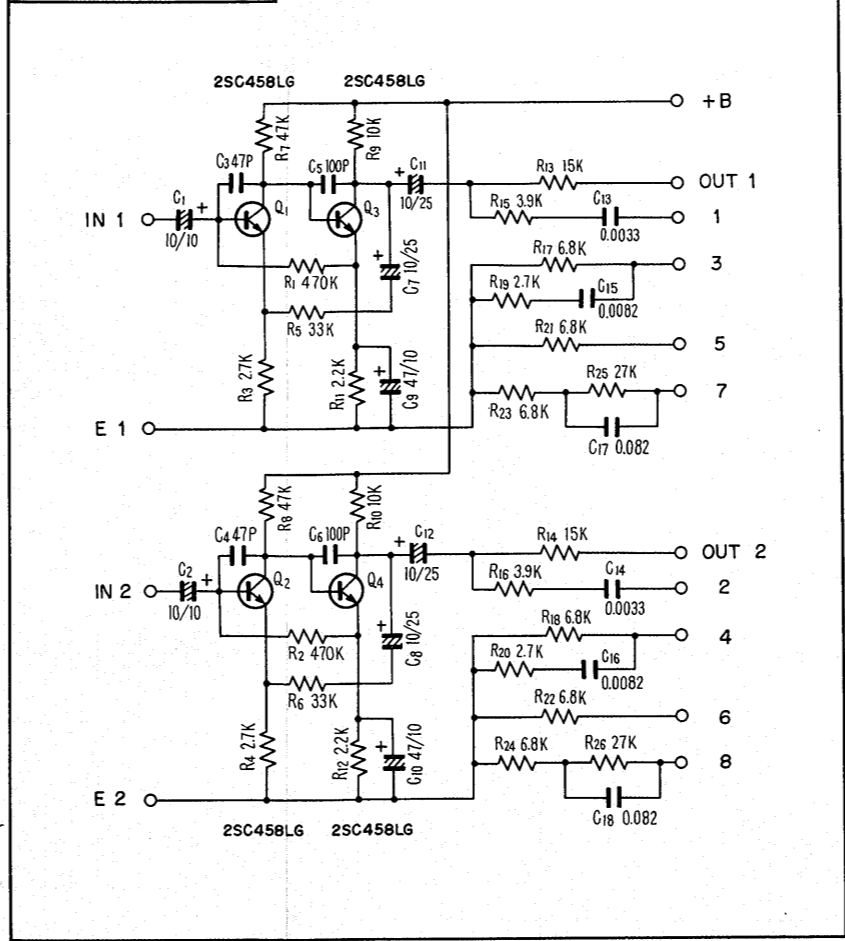 

CONTROL AMP UNIT W22-002

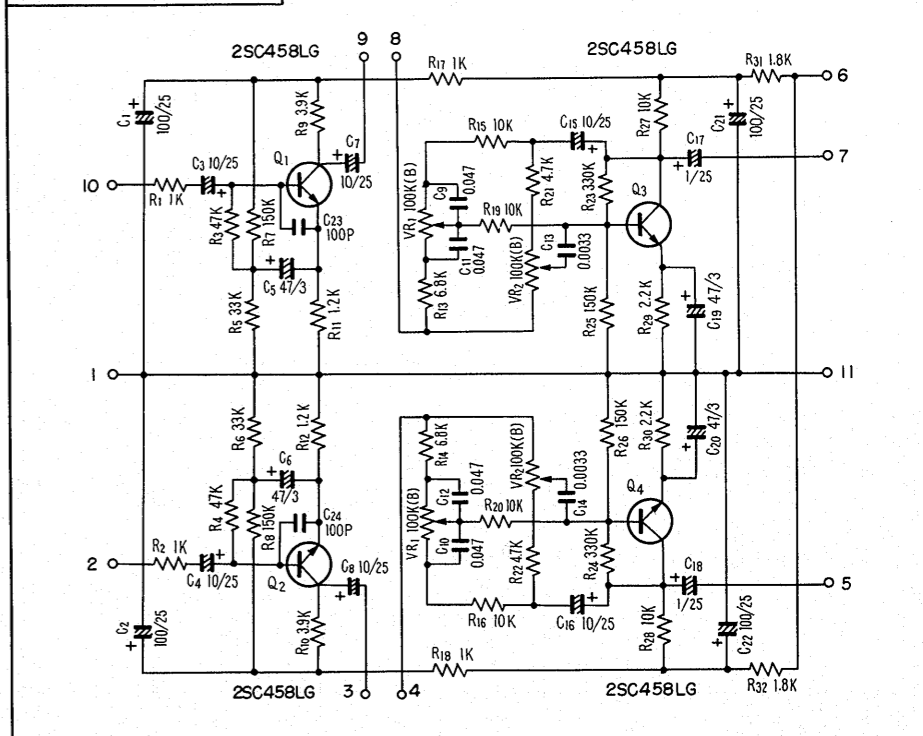 

REVERB AMP UNIT W28-002

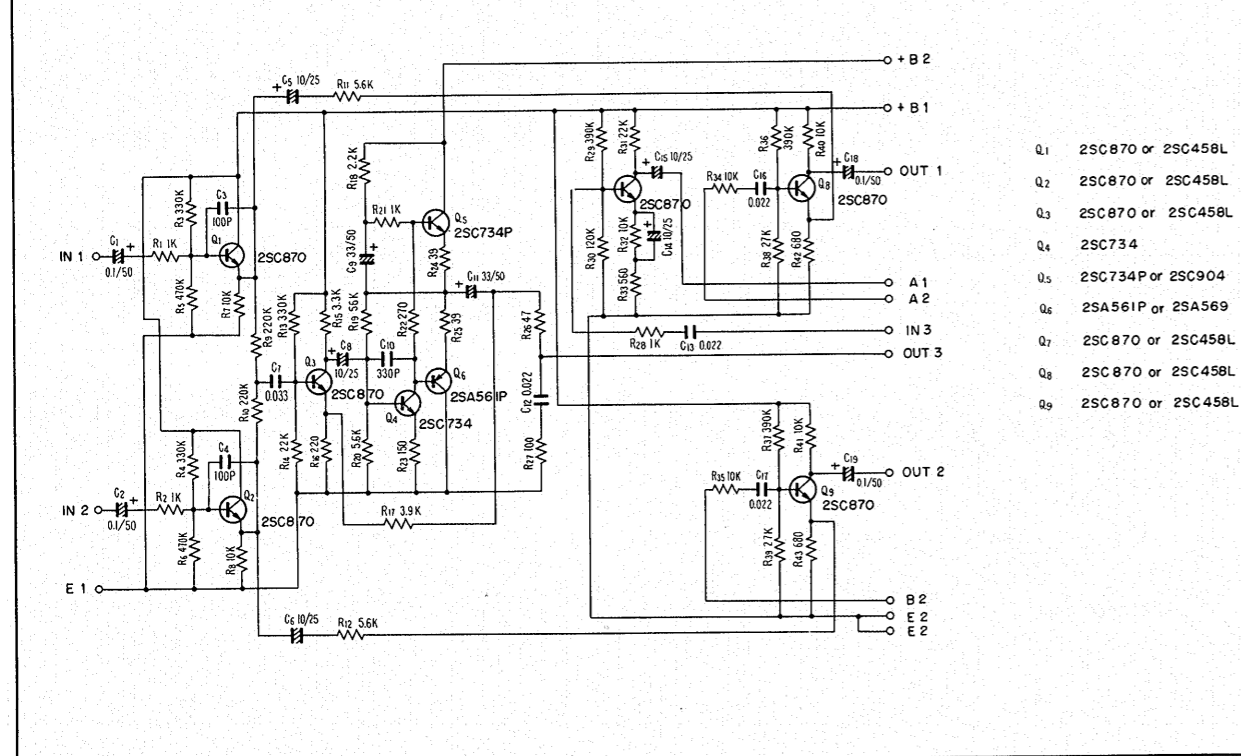 

MAIN AMP UNIT W23-010

