



- NOTES
- S200, S300 TAPE SELECTOR (CHROME POSITION)
 - S201, S301 REC - P.B SELECTOR SW (P.B POSITION)
 - S202, S302 MUTING SW (PLAY POSITION)
 - S203 - S303 SENSING MICRO SW
 - S101 PAUSE MICRO SW
 - S102 P.B. EQ. ADJ
 - VR201, VR301 P.B. GAIN ADJ
 - VR202, VR302 P.B. LEVEL ADJ
 - VR204, VR304 REC. LEVEL ADJ
 - VR205, VR305 LEVEL METER ADJ
 - VR206, VR306 REG. LEVEL ADJ
 - VR207, VR307 STANDARD TAPE BIAS ADJ
 - VR208, VR308 L.H. TAPE BIAS ADJ
 - VR209, VR309 CHROME TAPE BIAS ADJ