



- NOTES
- S₁, S₁₅ FWD-REV SELECTOR SW (FWD POSITION)
 - S₂, S₅ REC-RB. SELECTOR SW (RB. POSITION)
 - S₃ EQUALIZER SELECTOR SW (7½IPS POSITION)
 - S₄ REC. MODE SW (ST. POSITION)
 - S₆ MUTING SW (PLAY POSITION)
 - S₇ CONTACT POINT OFF SW (PLAY/STOP POSITION)
 - S₈ PRE SET SW
 - S₉ PLUNGER SW
 - S₁₀ MOTOR SW
 - S₁₁ SHUT OFF SW
 - S₁₂ POWER SW
 - S₁₄ AUTO REVERSE SW
 - S₁₈ FWD-REV SELECTOR SW (FWD POSITION)
 - S₁₉ OSC SW
 - VR₁ FWD-EQUALIZER ADJ
 - VR₂ REV-EQUALIZER ADJ
 - VR₃ RB. LEVEL ADJ
 - VR₄ REC. LEVEL ADJ
 - VR₅ VU LEVEL ADJ
 - VR₆ FWD REC LEVEL ADJ
 - VR₇ REV REC LEVEL ADJ
 - VR₈ FWD L (ch) BIAS ADJ
 - VR₉ REV L (ch) BIAS ADJ
 - VR₁₀ FWD R (ch) BIAS ADJ
 - VR₁₁ REV R (ch) BIAS ADJ
 - VR₁₂ EH DUMMY ADJ