



CORRECTION OF SERVICE MANUAL

Date: Jul 8, 2005

No.: SCH04020-A 1/6

MODEL No.

S/M No.

PG

MODEL No.

S/M No.

PG

Refer to following list

Please correct your service manual

Please discard the previous Service Information SCH04020 dated Dec.24,2004.

Please add the contents and substitute the new pages attached after this page for the pages of each service manual as follows.

| MODEL No. | S/M No. | S/M PG | New PG | MODEL No. | S/M No. | S/M PG | New PG |
|------------------|---------|---------|---------|-------------------|---------|---------|---------|
| XV-DV323/MYXJ | RRV2906 | 103-105 | 2/7-4/7 | XV-DV740/KUCXJ | RRV2946 | 102-104 | 2/7-4/7 |
| XV-DV323/NVXJ | RRV2906 | 103-105 | 2/7-4/7 | | | | |
| XV-DV323/LFXJ | RRV2947 | - | - | XV-DV440/KCXJ | RRV2946 | 102-104 | 2/7-4/7 |
| XV-DV323/MLXJ/NC | RRV2947 | - | - | | | | |
| XV-DV323/YLXJ/NC | RRV2947 | - | - | XV-DV313/MYXJN | RRV2772 | 118-120 | 5/7-7/7 |
| XV-DV323/YPWXJ | RRV2974 | - | - | XV-DV313/NVXJN | RRV2772 | 118-120 | 5/7-7/7 |
| XV-DV323/MAXJ | RRV2974 | - | - | XV-DV313/MXJN/HK | RRV2820 | - | - |
| XV-DV323/NTXJN | RRV2974 | - | - | XV-DV313/MLXJN/NC | RRV2820 | - | - |
| XV-DV323/KDXJ | RRV2974 | - | - | XV-DV313/YLXJ/NC | RRV2820 | - | - |
| XV-DV323/MDXJ/RB | RRV2974 | - | - | XV-DV313/YPWXJN | RRV2820 | - | - |
| XV-DV323/MXJ/HK | RRV2974 | - | - | XV-DV313/LFXJN | RRV2820 | - | - |
| XV-DV323/NRXJ | RRV2974 | - | - | XV-DV313/NTXJN | RRV2830 | - | - |
| | | | | XV-DV313/NKXJN | RRV2830 | - | - |
| XV-DV222/MYXJN | RRV2886 | - | - | XV-DV313/MAXJ | RRV2830 | - | - |
| XV-DV222/NVXJN | RRV2886 | - | - | | | | |
| | | | | XV-DV515/MYXJ | RRV2772 | 118-120 | 5/7-7/7 |
| XV-DV424/MYXJ | RRV2906 | 103-105 | 2/7-4/7 | XV-DV515/NVXJ | RRV2772 | 118-120 | 5/7-7/7 |
| XV-DV424/NVXJ | RRV2906 | 103-105 | 2/7-4/7 | XV-DV515/YPWXJ | RRV2813 | - | - |
| XV-DV424/LFXJ | RRV2948 | - | - | XV-DV515/LFXJ | RRV2813 | - | - |
| XV-DV424/MLXJ/NC | RRV2948 | - | - | XV-DV515/MLXJ/NC | RRV2813 | - | - |
| XV-DV424/YLXJ/NC | RRV2948 | - | - | XV-DV515/YLXJ/NC | RRV2813 | - | - |
| XV-DV424/YPWXJ | RRV2975 | - | - | XV-DV515/NTXJN | RRV2813 | - | - |
| XV-DV424/MAXJ | RRV2975 | - | - | | | | |
| XV-DV424/NTXJN | RRV2975 | - | - | XV-DV515TA/MAXJ | RRV2837 | - | - |
| | | | | | | | |
| XV-DV525/MYXJ | RRV2906 | 103-105 | 2/7-4/7 | XV-DV430/KUCXJN | RRV2837 | - | - |
| XV-DV525/NVXJ | RRV2906 | 103-105 | 2/7-4/7 | | | | |
| XV-DV525/LFXJ | RRV2949 | - | - | | | | |
| XV-DV525/MLXJ/NC | RRV2949 | - | - | | | | |
| XV-DV525/YLXJ/NC | RRV2949 | - | - | | | | |
| XV-DV525/YPWXJ | RRV2976 | - | - | | | | |
| XV-DV525/MAXJ | RRV2976 | - | - | | | | |
| XV-DV525/NTXJN | RRV2976 | - | - | | | | |

PIONEER SERVICE NETWORK CORPORATION

K.NOHARA ,MANAGER
HE

Technical Support Group
Service Support Division

Memo: SMC05H019 YS.62


<1>Please add the following contents.

Make sure to tighten these screws when assemble the unit because the DSP assy on the CONTROL assy gets the GND from the rear panel.

Refer to RRV2906 page:103

3 CONTROL Assy

① Remove the five screws. (for XV-DV525)
Remove the four screws. (for XV-DV424 and XV-DV323)

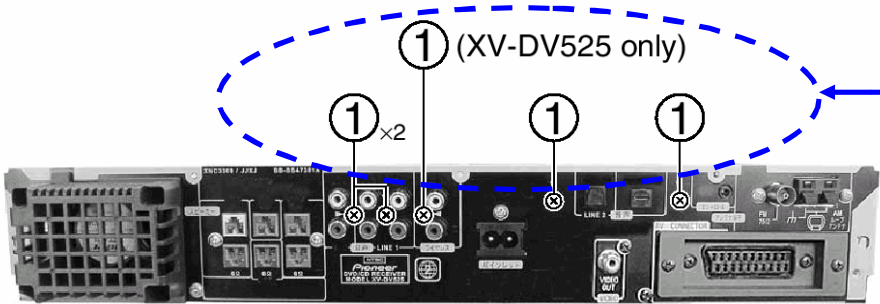


● Rear view

Refer to RRV2946 page:102

3 CONTROL Assy

① Remove the four screws.

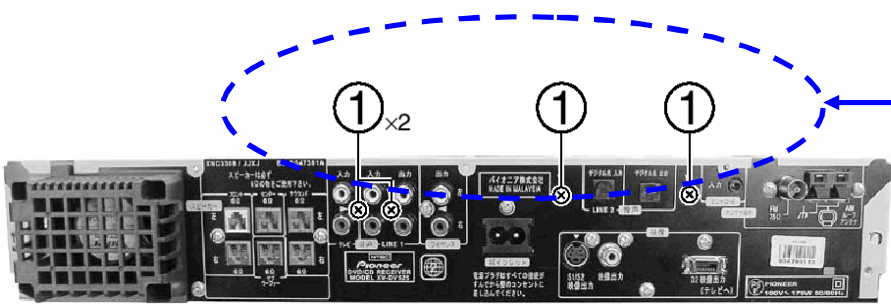

● Rear view


<2>Please add the following contents.

Refer to RRV2772 page 118.

Make sure to tighten these screws when assemble the unit because the DSP assy on the CONTROL assy gets the GND from the rear panel.

4 CONTROL Assy

- 1 Remove the four screws for XV-DV313.
Remove the five screws for XV-DV515.
(One screw is added for the wireless terminal.)

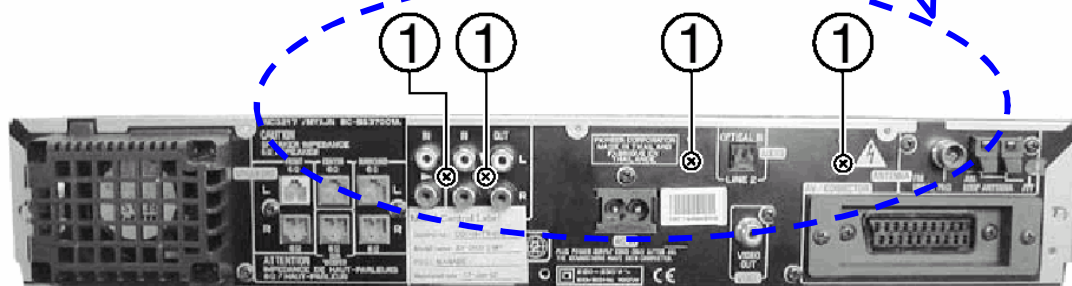

● Rear View

(This model is XV-DV313.)

<4>Please substitute this page for RRV2906 page 104 and RRV2946 page 103.

- 6) Reattach the front panel section.
- 7) Connect the jig cable.
- 8) Connect the following parts to the chassis
 - #DSP Holder
 - #Audio Terminal GND

Caution;

If the Power is turned on when the DSP Holder (DSP GND) and the Audio Terminal GND are not connected to the rear panel (chassis), the protection, "PRTCT ERR" works blinking the TIMER LED on the FL display and the parts below may be destroyed at the DSP ASSY.

Release the protection detection entering the "Service Test Mode".


See the "PROTECTION CIRCUIT" tips to enter it.

IC8702 : TC74VHCT244AFT

IC8401 : AK4529VQ


R8415 : 4.7O

If the above parts are destroyed, the audio signal can not be out.

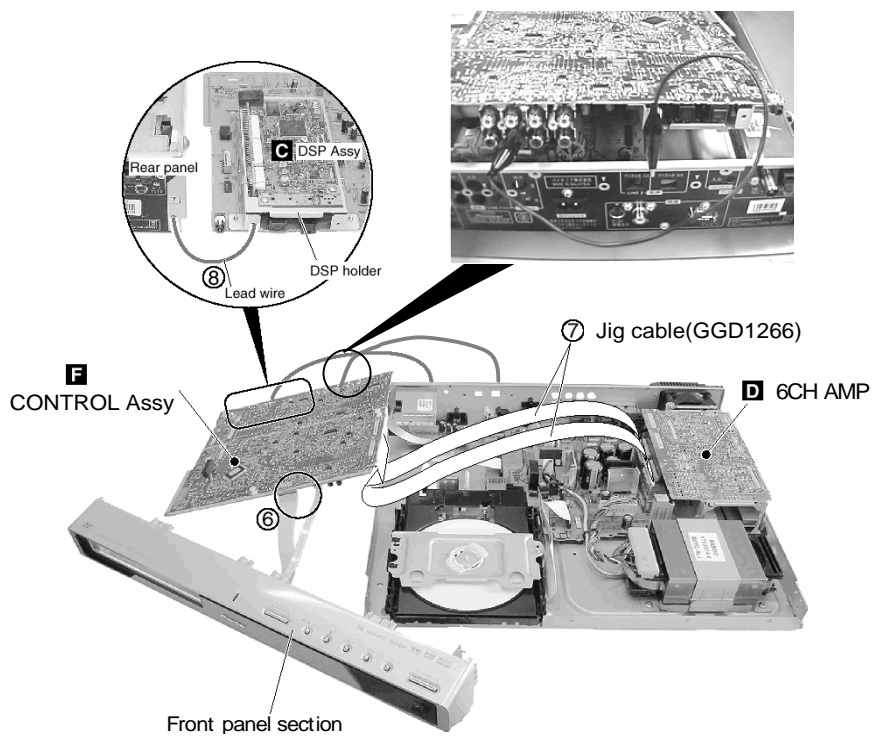

<5>Please add the following contents and lines.

Please refer to RRV2772 page 120.

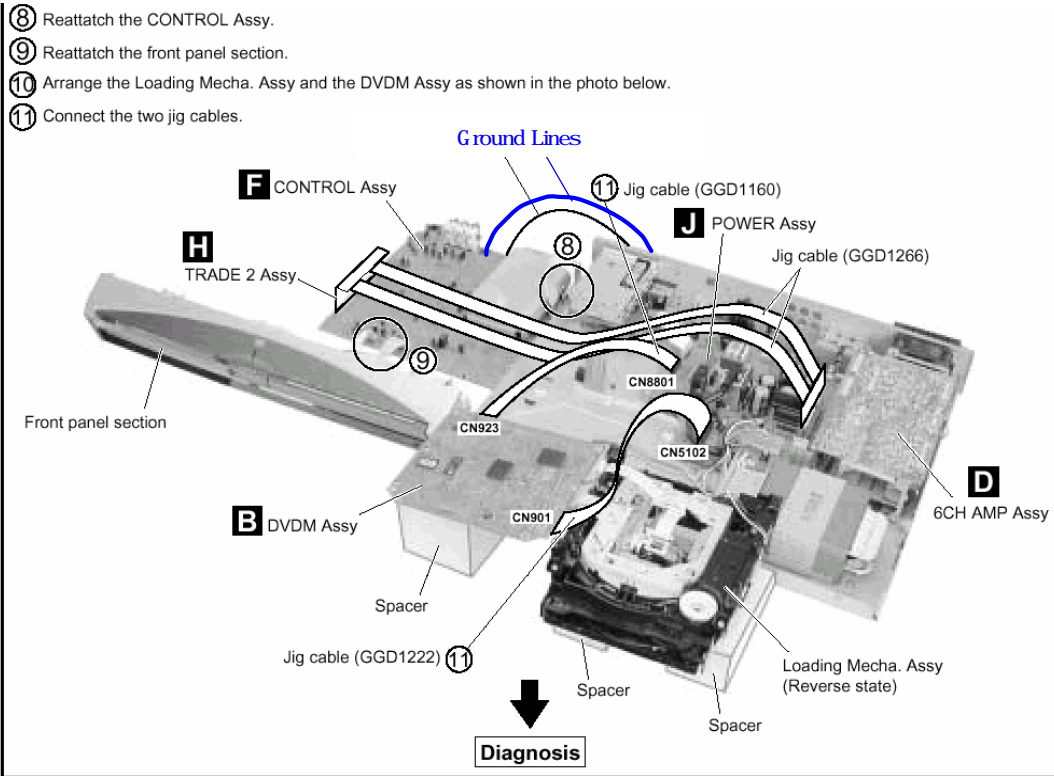

Please refer to RRV 2906 page 105 and RRV 2946 page 104.

