

# MOUNTING TEMPLATE OF THE MODEL SX-770

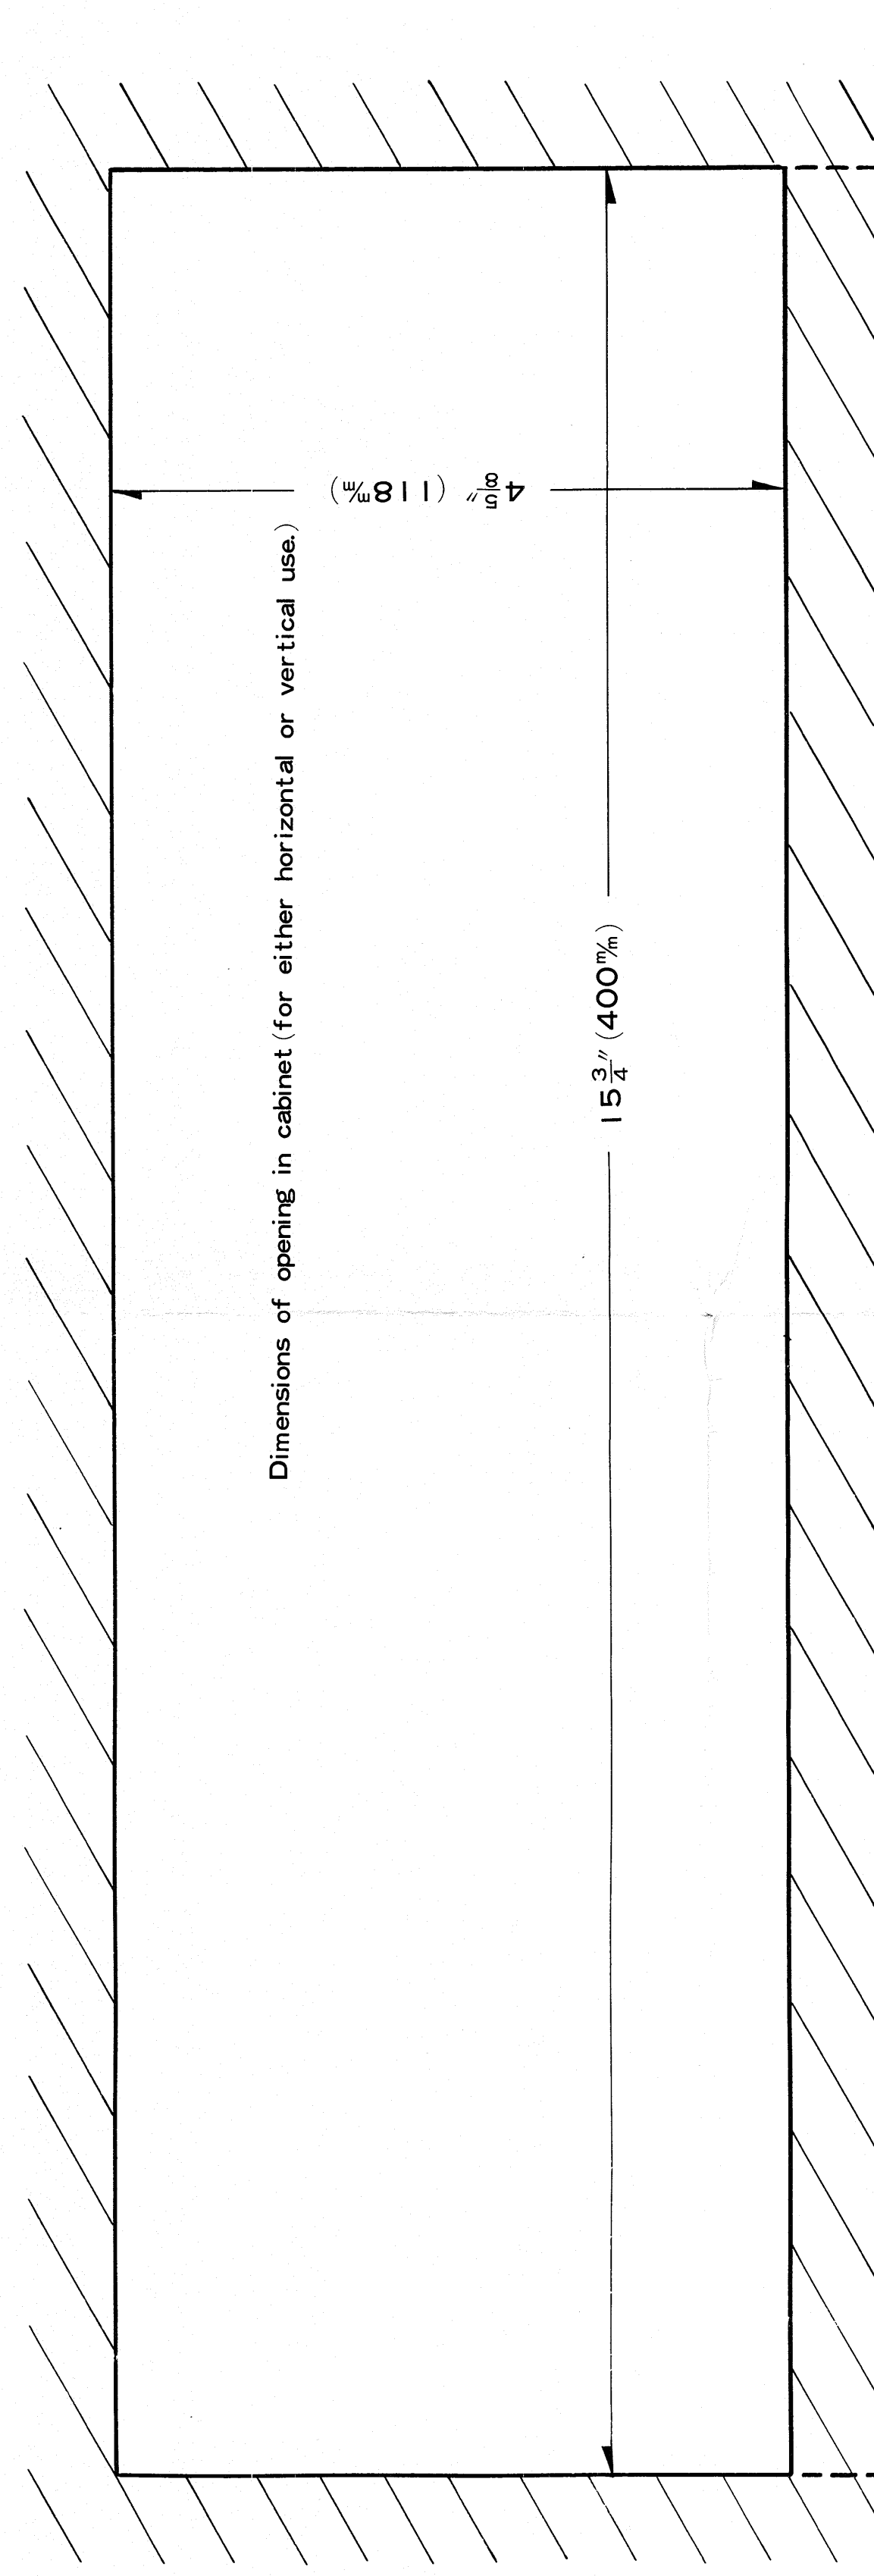


Fig. 1.

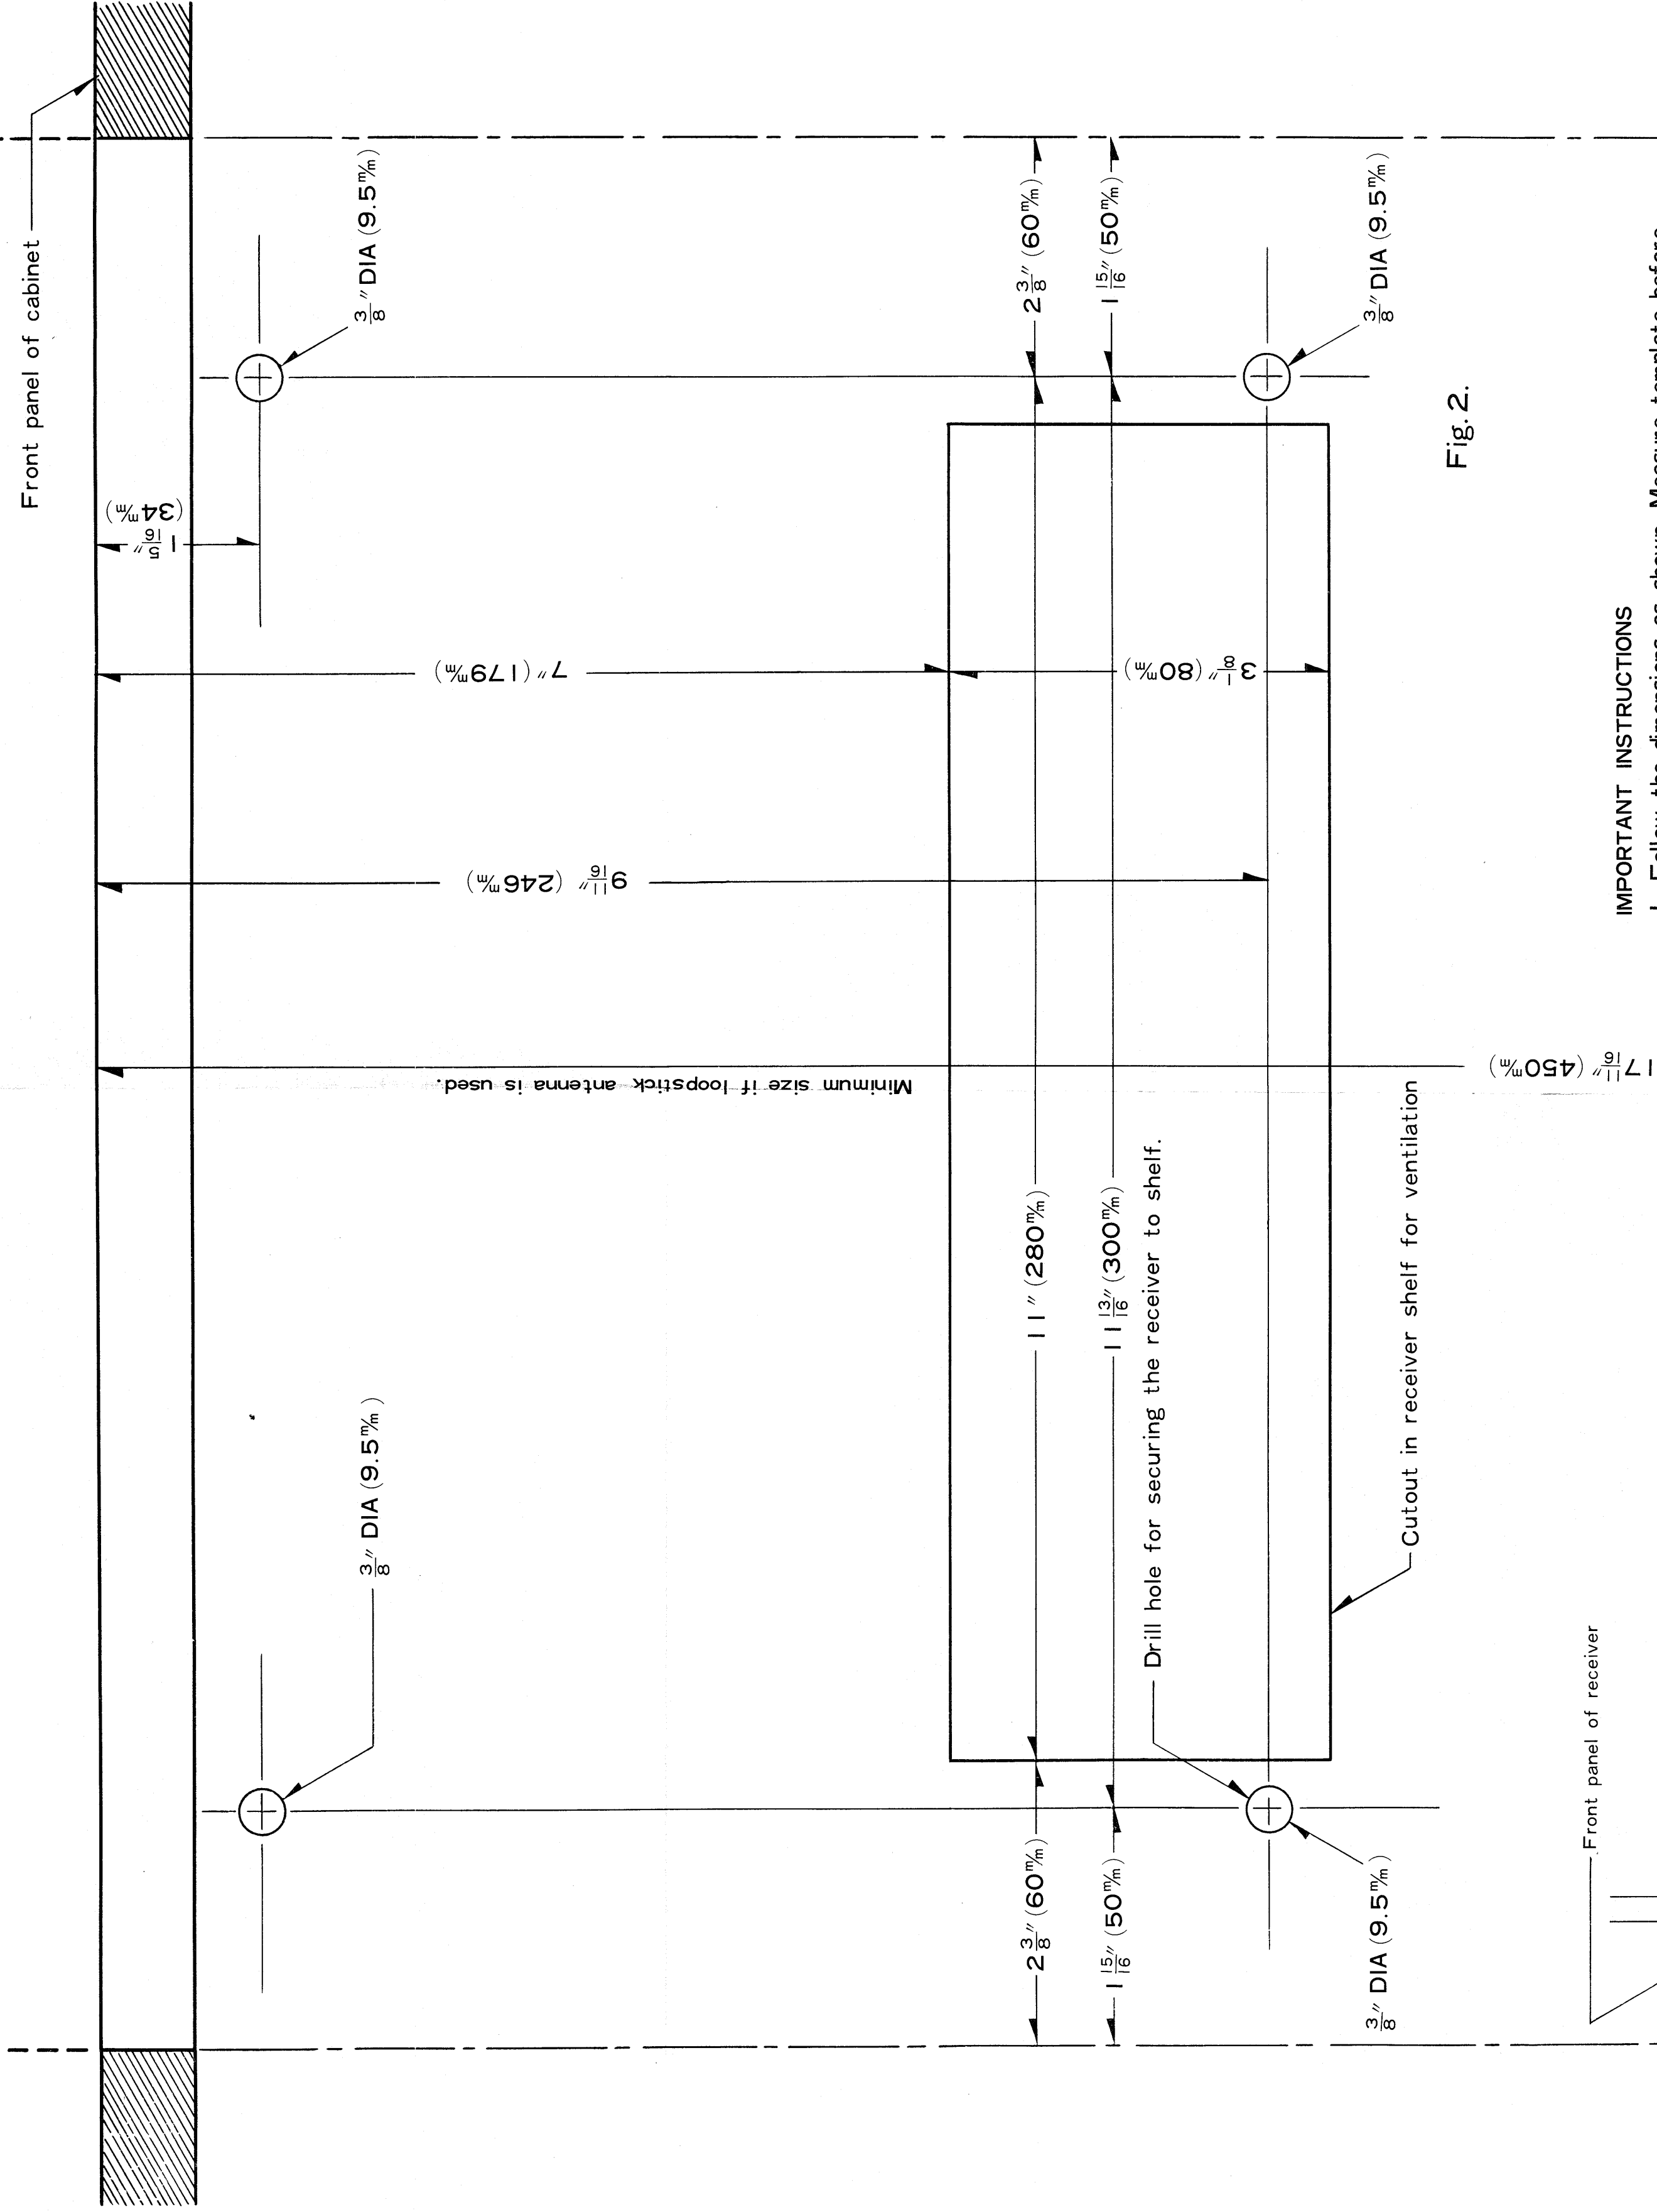


Fig. 2.

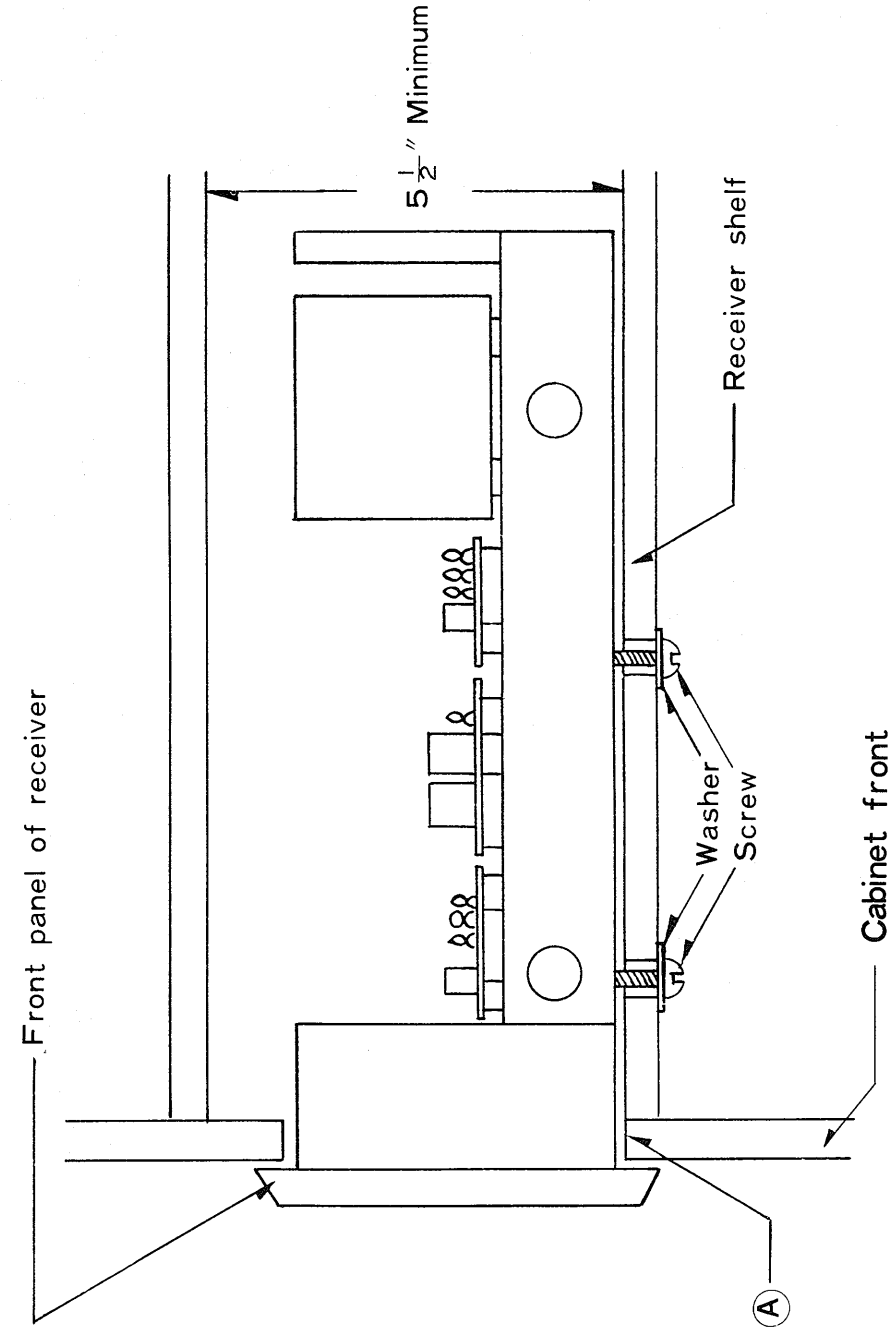


Fig. 3.

UNIT : inch (mm)

## IMPORTANT INSTRUCTIONS

1. Follow the dimensions as shown. Measure template before using because of paper shrinkage.
2. Make an opening for the front of the cabinet. The dimensions should be the same as Fig. 1.
3. The top of the receiver shelf must not be higher than the cut out portion of the cabinet front. (See (A) in Fig. 3.)
4. Drill holes in the receiver shelf as shown in Fig. 2.
5. Remove the four feet on the bottom plate of the receiver.
6. Secure the receiver in position on the receiver shelf with the screws and washers.
7. If there is a shelf above the receiver, leave a space of at least 5 1/2" above the receiver shelf for air circulation (See Fig. 3.)